



Measure up from the bottom edge 4 1/2" and across from the side 4 1/2" and mark lines. Cut along drawn lines.

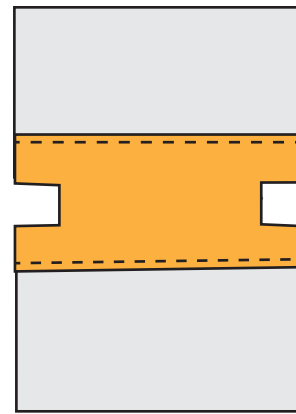

Fold Bag bottom in half. Measure up from the folded edge 4" and across from the sides 4 1/2" and mark lines. Cut along drawn lines.

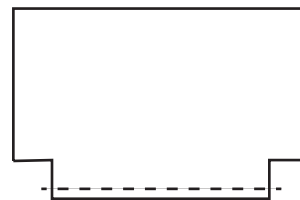


A



B

C


D

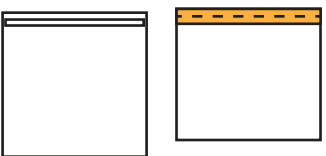


E

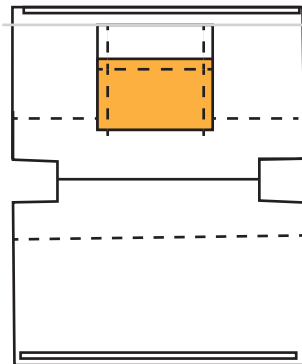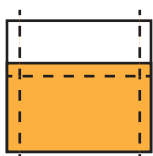


Fold Line

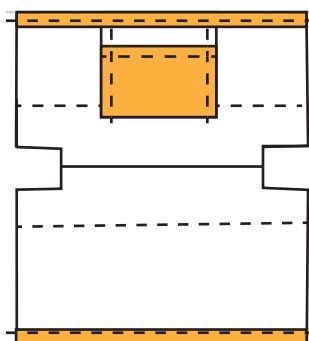


F

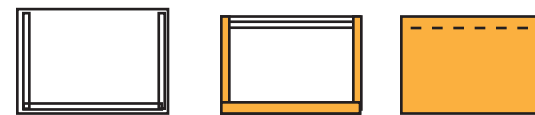

G


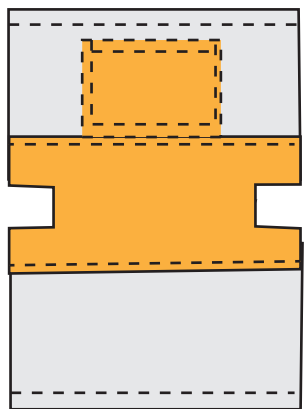


H

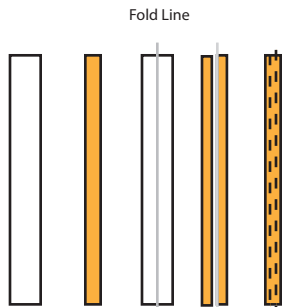


Fold Line

I

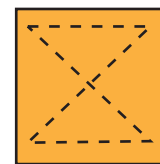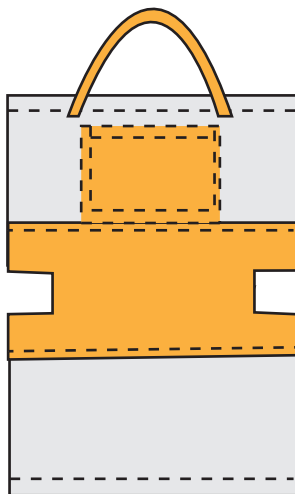

Closeup view of stitching

J

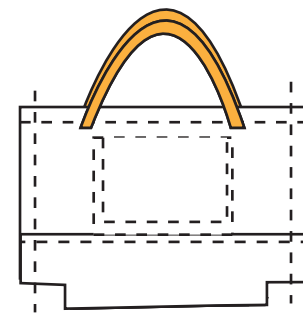

K



L



Aluminor Tote Bag by Lorine Mason
www.lorinemason.com